

NOTE: The red master key is only used to program the other key. It cannot start the vehicle and may cause the other key to become inoperative if used.

System operation

- System arms 5 seconds after switching ignition OFF. Immobilizer warning lamp flashes during this time **Fig. 3**.
- Arms automatically when ignition key is removed.
- Switch ignition ON.
- Immobilizer warning lamp illuminates for 2-3 seconds.
- If immobilizer warning lamp illuminates for 2-3 seconds then flashes rapidly:
- Key code not recognised.
- Remove key and try again.

Fig. 3

Programming

When

- System malfunction.
- Key added or replaced.
- Red master key replaced.

How

- Obtain red master key and all other keys.
- Immobilizer can only be programmed using diagnostic equipment.

NOTE: A maximum of 5 keys can be programmed.

3

