


Stereo Sound System

Stereo Radio Tuner Terminals


'96 – '98 models:

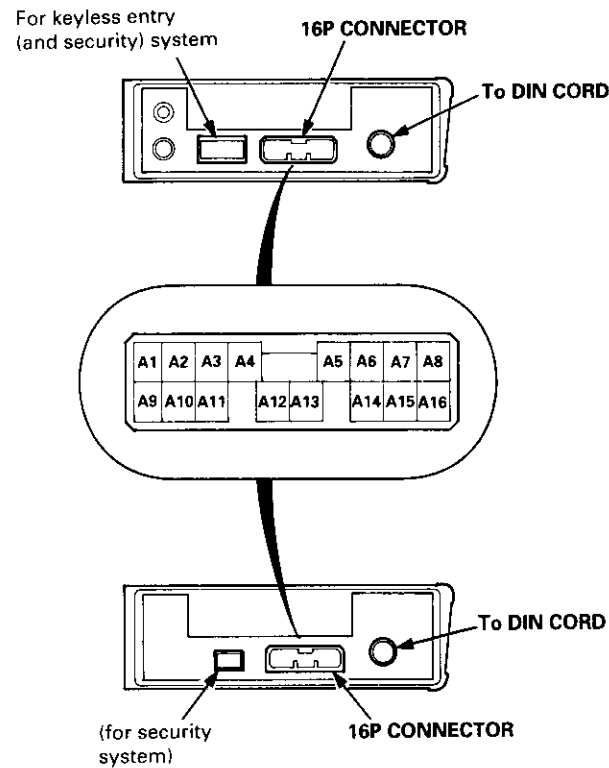

Cavity	Wire	Connects to
A1	RED/GRN	Right front door speaker ⊕, right tweeter ⊕
A2	BLU	Left front door speaker ⊕, left tweeter ⊕
A3	RED/BLK	Lights-on signal
A4	WHT/BLU	Constant power (tuning memory)
A5	YEL/RED	ACC (main stereo power supply)
A7	BLU/YEL	Left rear speaker ⊕
A8	RED/YEL	Right rear speaker ⊕
A9	BRN/BLK	Right front door speaker ⊖, right tweeter ⊖
A10	GRY/BLK	Left front door speaker ⊖, left tweeter ⊖
A12	RED	Dash lights brightness controller
A14	BLK	Ground (G501)
A15	GRY/WHT	Left rear speaker ⊖
A16	BRN/WHT	Right rear speaker ⊖

Terminals A6, A11 and A13: Not used

'99 – '00 models:

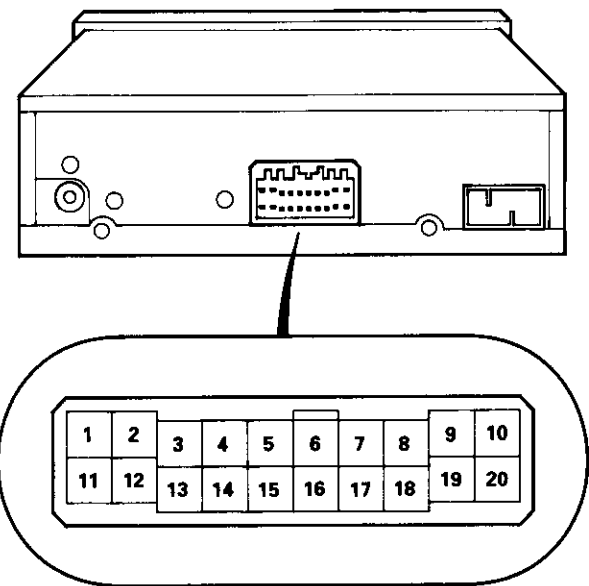

Cavity	Wire	Connects to
2	YEL/RED	ACC (main stereo power supply)
5	RED/YEL	Right rear speaker ⊕
6	BLU/YEL	Left rear speaker ⊕
7	RED/GRN	Right front door speaker ⊕, right tweeter ⊕
8	BLU	Left front door speaker ⊕, left tweeter ⊕
9	RED/BLK	Lights-on signal
10	WHT/BLU	Constant power (tuning memory)
15	BRN/WHT	Right rear speaker ⊖
16	GRY/WHT	Left rear speaker ⊖
17	BRN/BLK	Right front door speaker ⊖, right tweeter ⊖
18	GRY/BLK	Left front door speaker ⊖, left tweeter ⊖
19	RED	Dash lights brightness controller
20	BLK	Ground (G501)

Terminals No. 1, 3, 4, 11, 12, 13, and 14: Not used