

Doors


Rear Door Panel Removal/Installation

20-15

Special Tools Required

Trim pad remover, Snap-On # A 177 or equivalent, commercially available.

1. If applicable, remove the regulator handle (A) by pulling the clip (B) out with a wire hook (C).

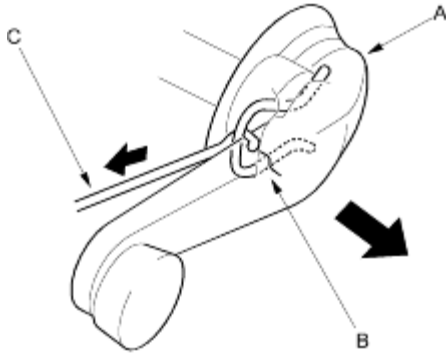


2. Remove the inner handle (A). Take care not to scratch the door panel.

1. Pry out on the upper portion of the cover (B) to release the hooks (C, D), then remove the cover.
2. Remove the screws.
3. Pull out the inner handle forward and out half-way to release the hook (E).
4. Disconnect the inner handle rod (F).

Fastener Locations

►: Screw, 2

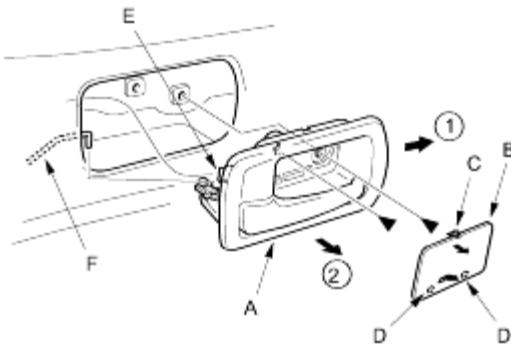

3. Remove the grip cover (A).


 
1. Using a flat-tip screwdriver wrapped with protective tape, pry out the front edge of the cover to release the clip (B).
2. Pry out along the bottom to release the lower hooks (C).
3. Pry out along the top to release the upper hooks (D), and release the clip (E) while pulling the cover forward.

Fastener Locations

C ►: Hook, 5

D ►: Hook, 4

►: Screw, 2

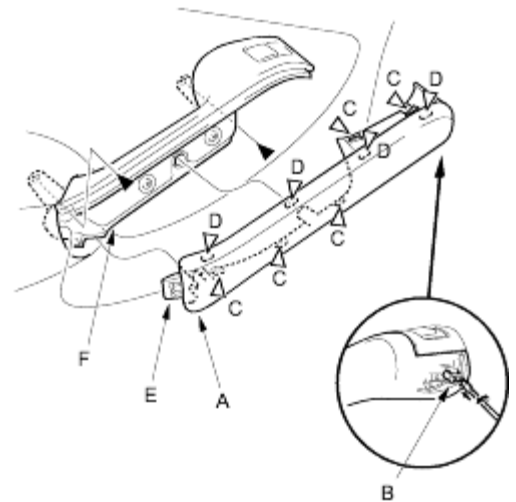

4. Remove the screws from the grip base (F).

Doors

Rear Door Panel Removal/Installation (cont'd)

20-16

Rear Door Outer Handle Replacement

5. Release the clips hold the door panel (A) with a


NOTE: Put on gloves to protect your hands.

commercially available trim pad remover (B), then remove the door panel by pulling it upward, and disconnecting the power window switch connector (C) (for some models). Remove the door panel with as little bending as possible to avoid creasing or breaking it.

Fastener Locations


▷: Clip, 7

6.

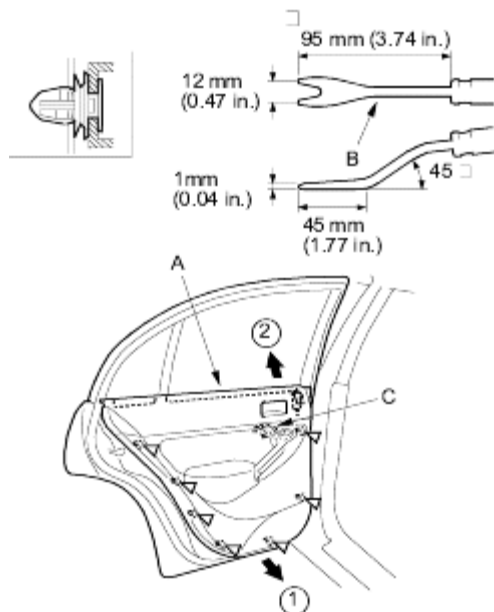

6. Install the door panel in the reverse order of removal, and note these items:

- Replace any damaged clips.
- Make sure the connectors are plugged in properly, and the rod is connected properly.
- If applicable, install the regulator handle so it points forward and up at a 45° angle with the glass fully closed.

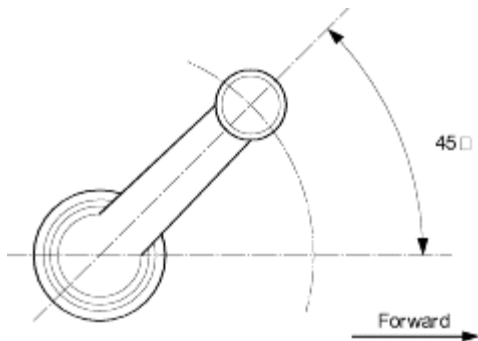

1. Raise the glass fully.


2. Remove these items:

- Door panel (see page [20-15](#))
- Plastic cover, as necessary (see page [20-5](#))

3. Release the inner handle rod (A) and lock rod (B) from the rod holder (C), and with power door lock, remove the screws, then remove the actuator (D) from the door.

Fastener Locations

▶: Screw, 2

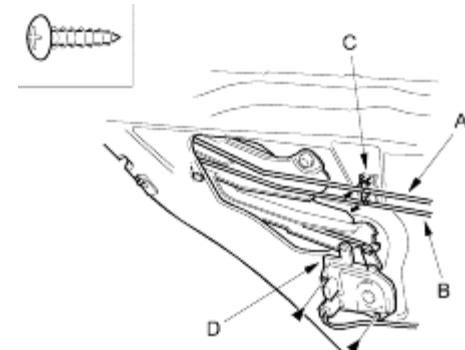

4. If applicable, remove the clip, and release the hooks (A), then remove the rod protector (B).

Fastener Location

▷: Clip, 1

